 


输入属于NPN型，不需要外接电源，直接短接COM和X点即可



03	GND
02	0V
01	24V

09	X7
08	X6
07	X5
06	X4
05	X3
04	X2
03	X1
02	X0
01	COM

09	X17
08	X16
07	X15
06	X14
05	X13
04	X12
03	X11
02	X10
01	COM

09	X27
08	X26
07	X25
06	X24
05	X23
04	X22
03	X21
02	X20
01	COM

模拟量输入


+	-	+	-	+	-	+	-	+	-	+	-	+	-	+	-
AD0	AD1	AD2	AD3	AD4	AD5	AD6	AD7	AD8	AD9						

0-10V模拟量输入

方向 脉冲

Y4	-	+	Y0	-	+
Y5	-	+	Y1	-	+
Y6	-	+	Y2	-	+
Y7	-	+	Y3	-	+
NC			NC		
NC			NC		
NC			NC		
NC			NC		

CAN	485-2/485-1
L H	B A B A
	GND

 

PLC下载口

- 2 TX
- 3 RX
- 5 GND

JT2N-48MRT-10AD-2DA

PLC运行开关



模拟量输出

DA1	DA0
I-V-G	I-V-G





称重-2	
E- E+ S- S+	

称重-1	
E- E+ S- S+	

10	Y17
09	Y16
08	Y15
07	Y14
06	COM1
05	Y13
04	Y12
03	Y11
02	Y10
01	COM0

10	Y27
09	Y26
08	Y25
07	Y24
06	COM3
05	Y23
04	Y22
03	Y21
02	Y20
01	COM2

10	Y37
09	Y36
08	Y35
07	Y34
06	COM5
05	Y33
04	Y32
03	Y31
02	Y30
01	COM4

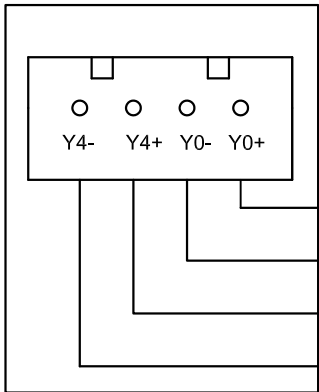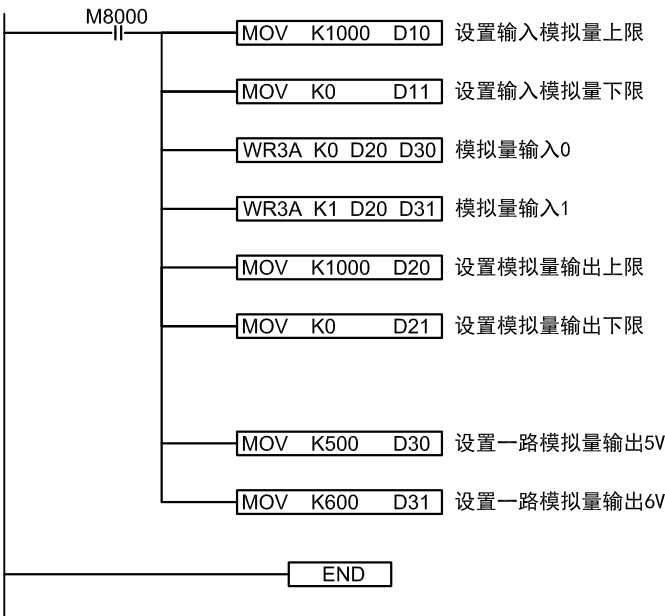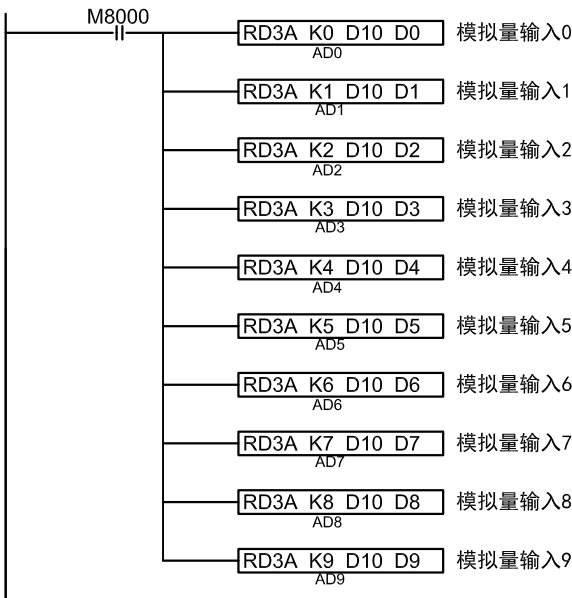 

产品合格证

生产日期		检验结论	合格	检验员	
------	--	------	----	-----	--