

PLC下载口  
2 TX  
3 RX  
5 GND

## PLC运行开关



JT3U-16MRT-4AD-2DA

|       |       |
|-------|-------|
| G-V-I | G-V-I |
| DA0   | DA1   |

### 0-10V模拟量输出

方向      脉冲



 
|    |   |   |    |   |   |
|----|---|---|----|---|---|
| Y4 | - | + | Y0 | - | + |
| Y5 | - | + | Y1 | - | + |
| Y6 | - | + | Y2 | - | + |
| Y7 | - | + | Y3 | - | + |

|     |   |     |   |     |   |     |   |     |   |     |   |
|-----|---|-----|---|-----|---|-----|---|-----|---|-----|---|
| +   | - | +   | - | +   | - | +   | - | +   | - | +   | - |
| AD5 |   | AD4 |   | AD3 |   | AD2 |   | AD1 |   | AD0 |   |

0-10V模拟量输入

### 0-10V模拟量输入

|    |      |
|----|------|
| 04 | NC   |
| 03 | NC   |
| 02 | Y27  |
| 01 | Y26  |
| 10 | COM3 |
| 09 | Y25  |
| 08 | Y24  |

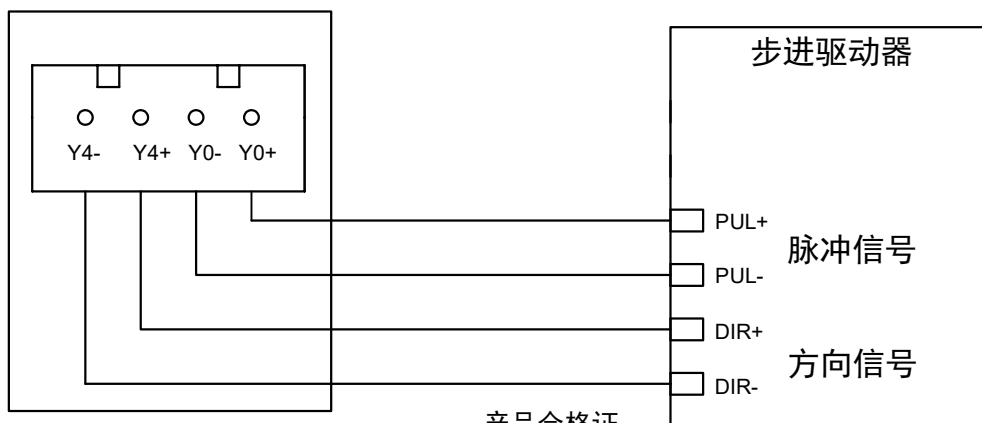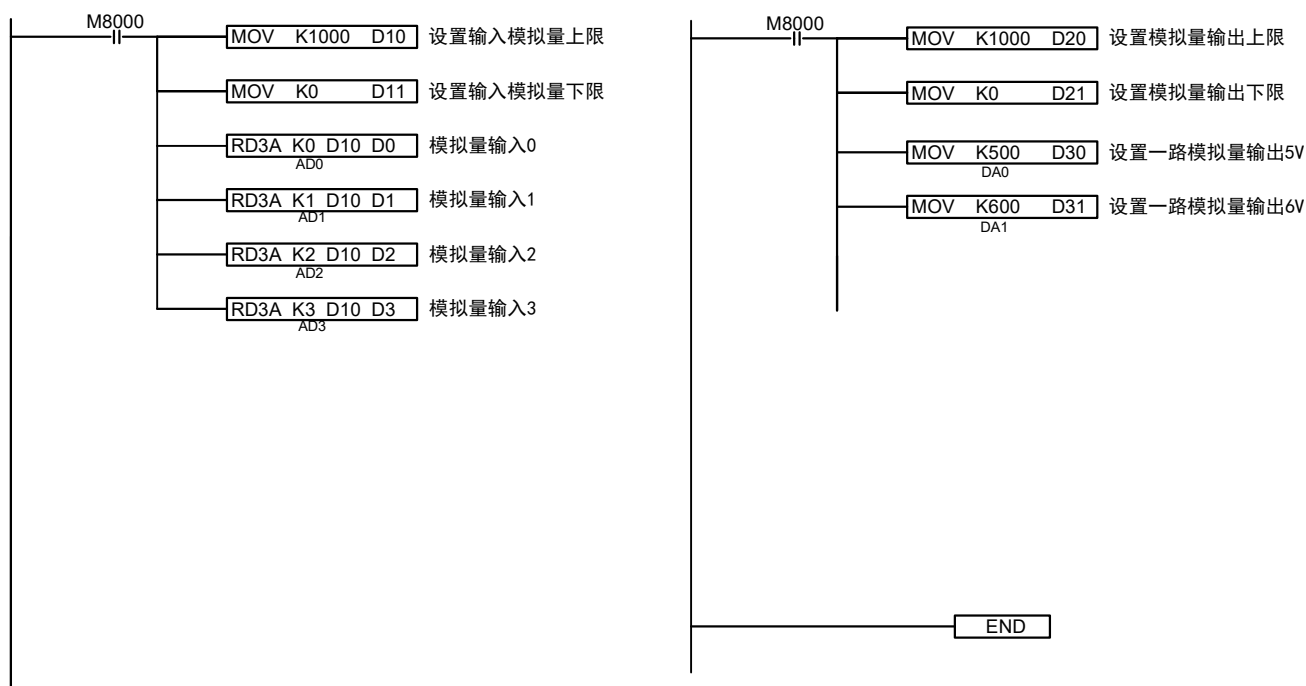

## 产品合格证

|      |  |      |    |     |  |
|------|--|------|----|-----|--|
| 生产日期 |  | 检验结论 | 合格 | 检验员 |  |
|------|--|------|----|-----|--|