 
 


输入属于NPN型，不需要外接电源，直接短接COM和X点即可



03	01	05	06
02	02	04	05
GND	03	X3	X4
0V	X0	X1	X2
24V			

CAN	485-2	485-1
L	B	A
H	B	A
GND		



PLC下载口
2 TX
3 RX
5 GND

JT3U-12MRT-2AD-1DA




方向			脉冲		
Y4	-	+	Y0	-	+
Y5	-	+	Y1	-	+
Y6	-	+	Y2	-	+
Y7	-	+	Y3	-	+



PLC运行开关

0-10V模拟量输出
DA0 AD0 AD1
0-10V模拟量输入

01	02	03	04	05	06	07	08	09	10
COM0	Y20	COM1	Y21	COM2	Y22	Y23	COM3	Y24	Y25

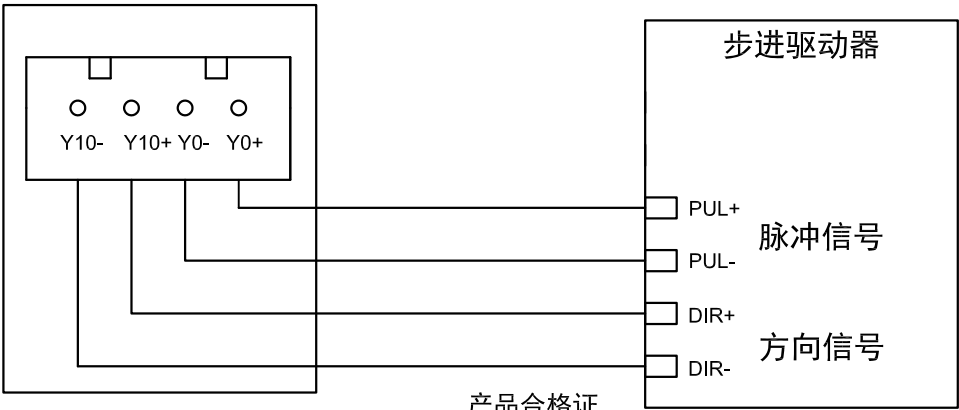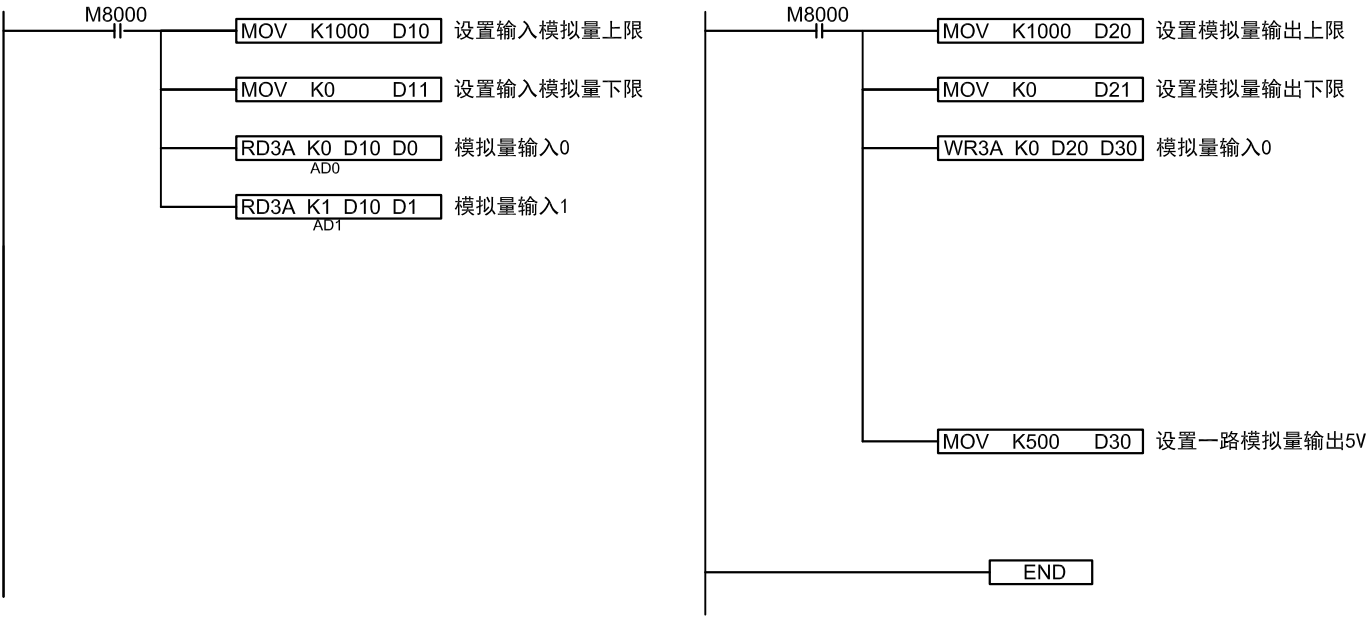   

产品合格证

生产日期		检验结论	合格	检验员	
------	--	------	----	-----	--

输入属于NPN型，不需要外接电源，直接短接COM和X点即可




01	02	03	04	05	06	07	08	09	07
24V	0V	GND	X1	X2	COM	X4	X5	X6	X7

G-V-I	G-V-I
DA0	DA1

0-10V模拟量输出

方向			脉冲		
Y10	-	+	Y0	-	+
Y11	-	+	Y1	-	+
Y12	-	+	Y2	-	+
Y13	-	+	Y3	-	+
Y14	-	+	Y4	-	+
Y15	-	+	Y5	-	+

CAN	485-2	485-1
L	H	
B	A	
B	A	
GND		

 

PLC下载口

- 2 TX
- 3 RX
- 5 GND

JT3U-16MRT-6AD-2DA

PLC运行开关








+	-	+	-	+	-
AD0	AD1	AD2			

0-10V模拟量输入

+	-	+	-	+	-
AD3	AD4	AD5			


01	02	03	04	05	06	07	08	09	10	01	02	03	04
COM0	Y20	Y21	COM1	Y22	Y23	COM2	Y24	Y25	COM3	Y26	Y27	NC	NC

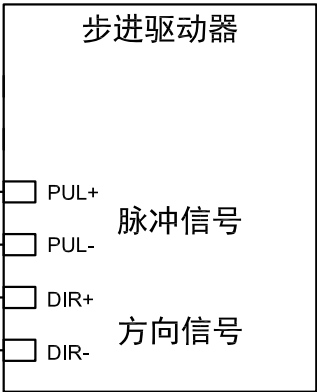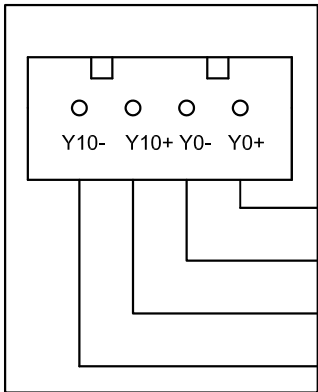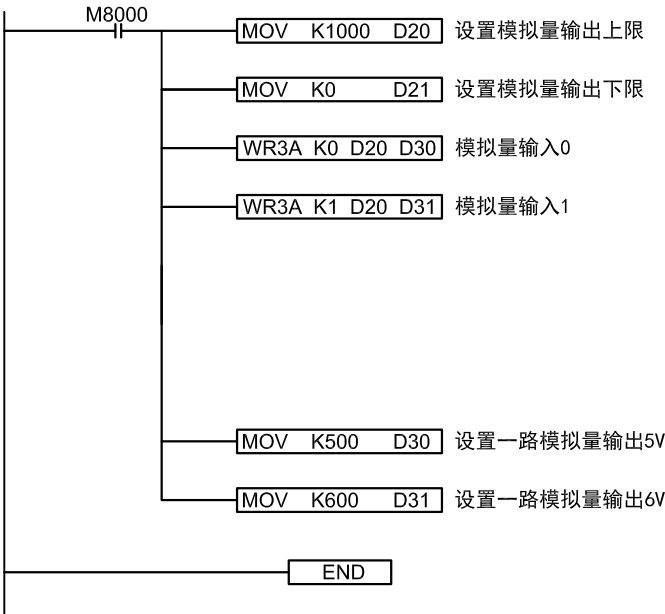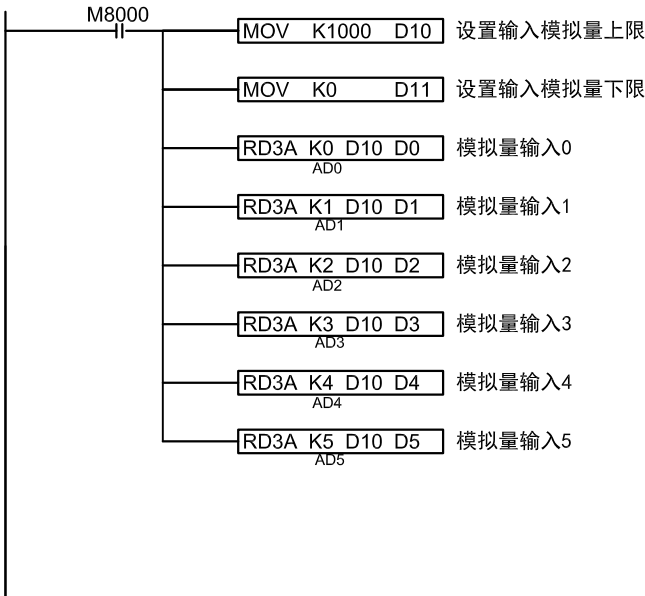     



产品合格证

生产日期		检验结论	合格	检验员	
------	--	------	----	-----	--

 输入属于NPN型，不需要外接电源，直接短接COM和X点即可


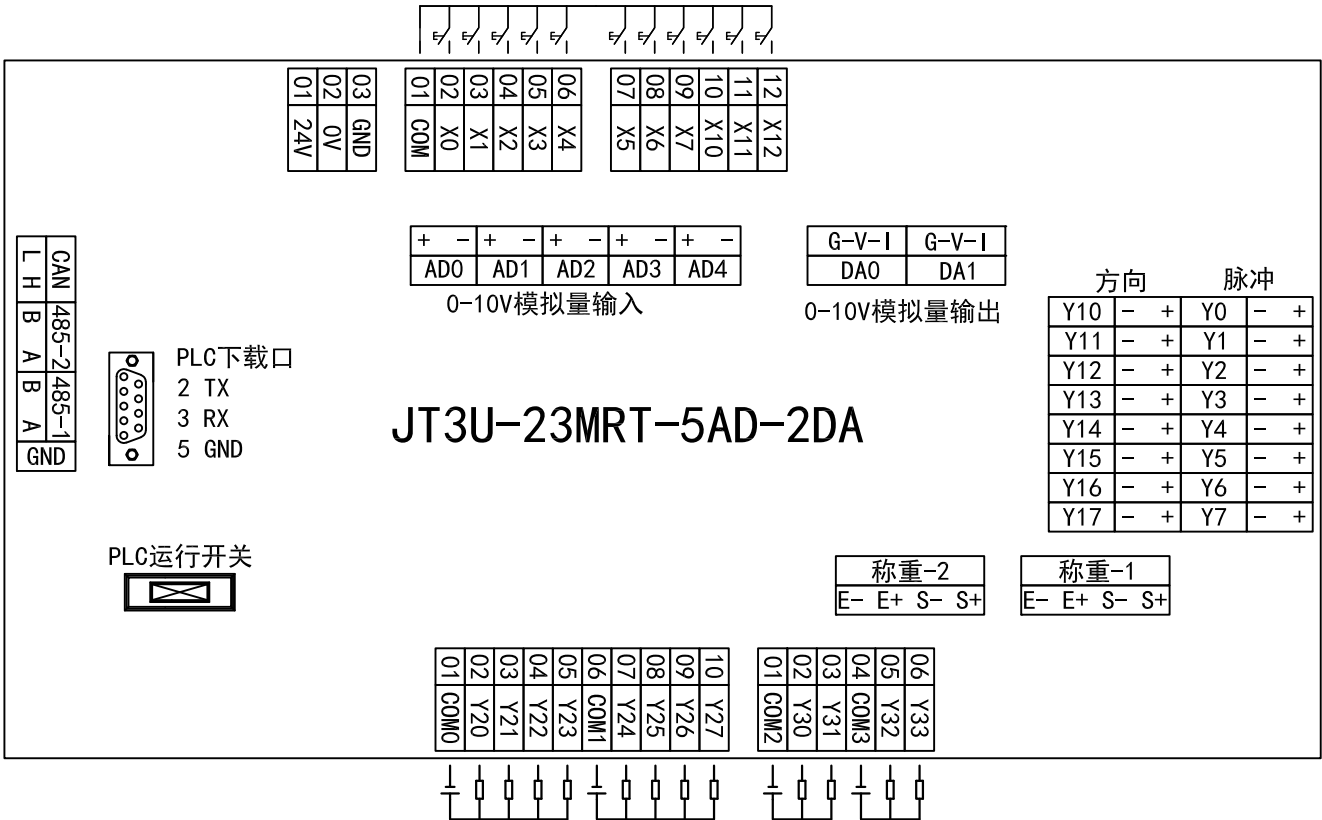


JT3U-23MRT-5AD-2DA

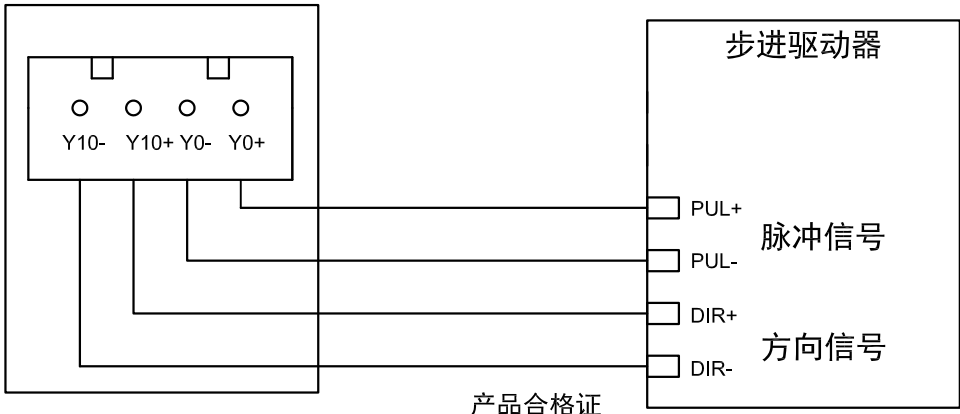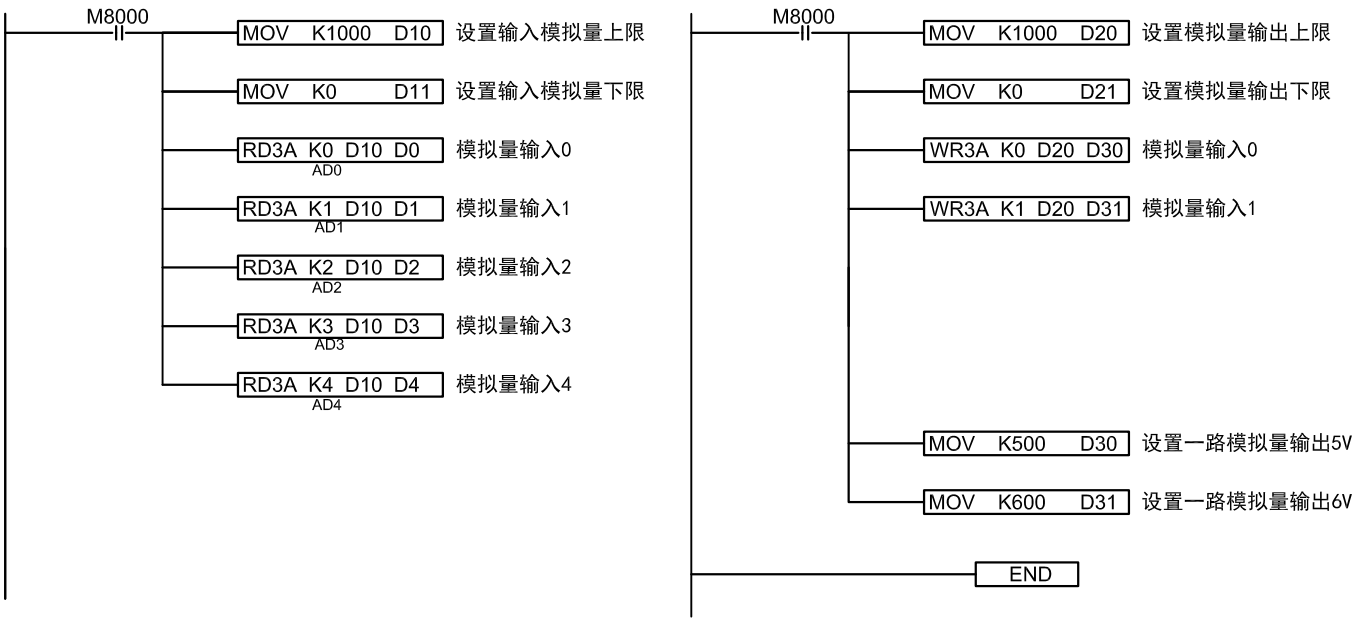  

生产日期		检验结论	合格	检验员	
------	--	------	----	-----	--

  输入属于NPN型，不需要外接电源，直接短接COM和X点即可



模拟量输入

+	-	+	-	+	-
AD0	AD1	AD2			


0-10V模拟量输入

+	-	+	-	+	-	+	-	+	-
AD3	AD4	AD5	AD6	AD7					

方向 脉冲

Y10	-	+	Y0	-	+
Y11	-	+	Y1	-	+
Y12	-	+	Y2	-	+
Y13	-	+	Y3	-	+
Y14	-	+	Y4	-	+
Y15	-	+	Y5	-	+

CAN	485-2	485-1
L	H	
B	A	
B	A	
GND		

 

PLC下载口

- 2 TX
- 3 RX
- 5 GND

JT3U-26MRT-8AD-2DA

PLC运行开关







模拟量输出

DA1	DA0
I-V-G	I-V-G

称重-2
E- E+ S- S+

    称重-1
E- E+ S- S+

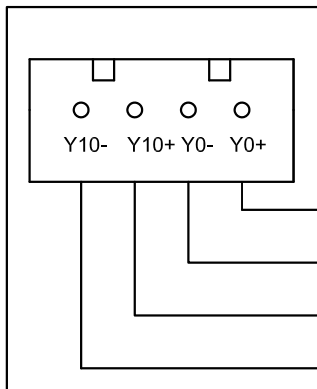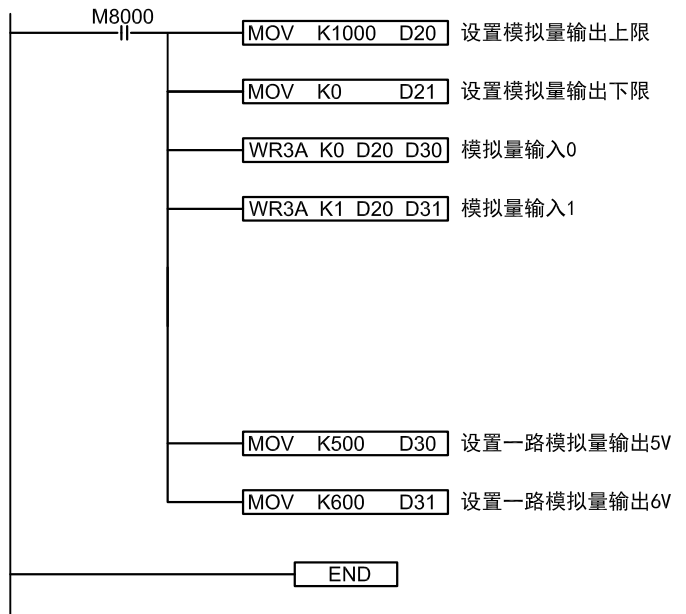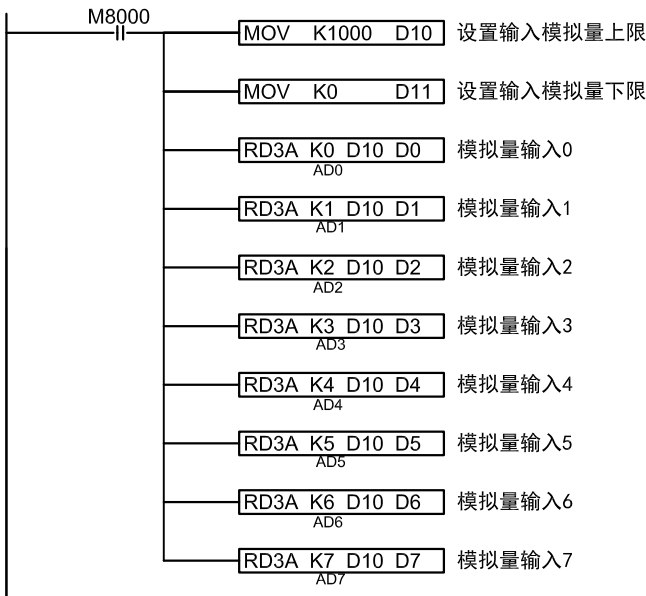

步进驱动器

脉冲信号

方向信号

产品合格证

 
生产日期

检验结论

合格

检验员

输入属于NPN型，不需要外接电源，直接短接COM和X点即可



01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18
24V	0V	GND	COM	X0	X1	X2	X3	X4	X5	X6	X7	X8	X9	X10	X11	X12	X13

模拟量输入

+	-	+	-	+	-	+	-	+	-
AD0	AD1	AD2	AD3	AD4					


0-10V模拟量输入

+	-	+	-	+	-	+	-	+	-
AD5	AD6	AD7	AD8	AD9					

方向 脉冲

Y10	-	+	Y0	-	+
Y11	-	+	Y1	-	+
Y12	-	+	Y2	-	+
Y13	-	+	Y3	-	+
Y14	-	+	Y4	-	+
Y15	-	+	Y5	-	+

CAN	485-2	485-1
L	H	
B	A	
B	A	
GND		

 

PLC下载口

- 2 TX
- 3 RX
- 5 GND

JT3U-34MRT-10AD-2DA

PLC运行开关







模拟量输出

DA1	DA0
I-V-G	I-V-G

称重-2
E- E+ S- S+

称重-1
E- E+ S- S+

01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22
COM0	Y20	Y21	Y22	Y23	COM1	Y24	Y25	Y26	Y27	Y30	COM2	Y31	Y32	Y33	Y34	COM3	Y35	Y36	Y37	Y40	Y41

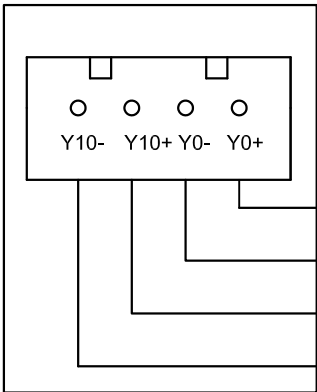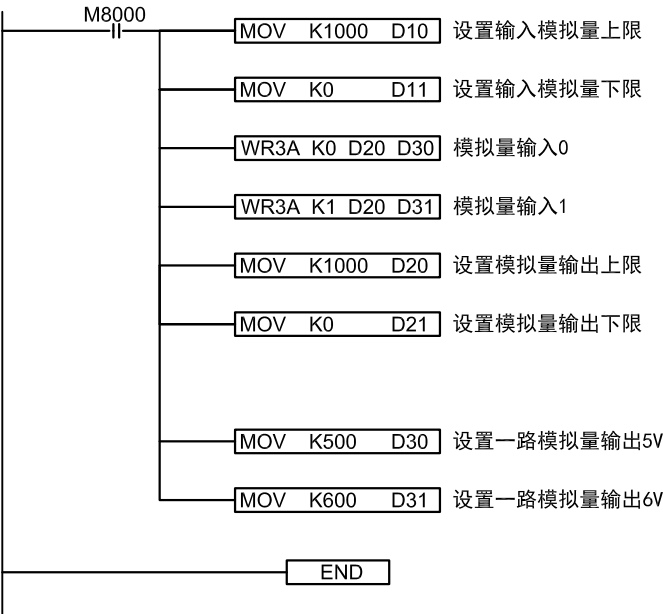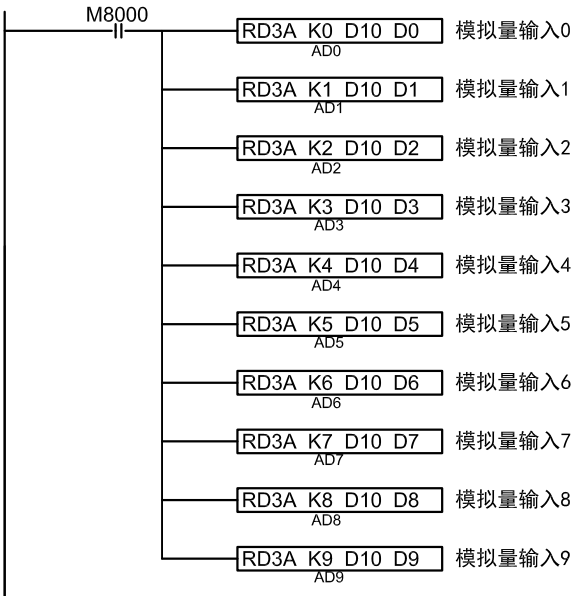    

步进驱动器

脉冲信号

方向信号

产品合格证

 
生产日期

检验结论

合格

检验员

输入属于NPN型，不需要外接电源，直接短接COM和X点即可



01	02	03
24V	0V	GND

01	02	03	04	05	06	07
COM	X0	X1	X2	X3	X4	X5

08	09	10	11	12	13	14
X6	X7	X10	X11	X12	X13	X14

15	16	17	18	19	20	21
X15	X16	X17	X18	X19	X20	X21

模拟量输入

+	-	+	-	+	-	+	-	+	-
AD0	AD1	AD2	AD3	AD4					


0-10V模拟量输入

+	-	+	-	+	-	+	-	+	-
AD5	AD6	AD7	AD8	AD9					

方向 脉冲

Y10	-	+	Y0	-	+
Y11	-	+	Y1	-	+
Y12	-	+	Y2	-	+
Y13	-	+	Y3	-	+
Y14	-	+	Y4	-	+
Y15	-	+	Y5	-	+

CAN	485-2/485-1
L	H
B	A
B	A
GND	

 

PLC下载口

- 2 TX
- 3 RX
- 5 GND

JT3U-40MRT-10AD-2DA

PLC运行开关



模拟量输出

DA1	DA0
I-V-G	I-V-G





称重-2
E- E+ S- S+

称重-1
E- E+ S- S+

01	02	03	04	05	06	07	08	09
COM0	Y20	Y21	Y22	Y23	COM1	Y24	Y25	Y26

10	01	02	03	04	05	06	07	08
COM2	Y27	Y30	Y31	Y32	COM3	Y33	Y34	Y35

09	10	01	02	03	04	05	06	06
COM4	Y36	Y37	Y40	COM5	Y41	Y42	Y43	NC

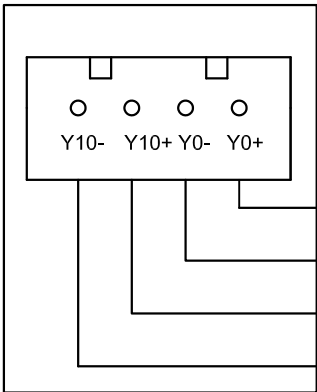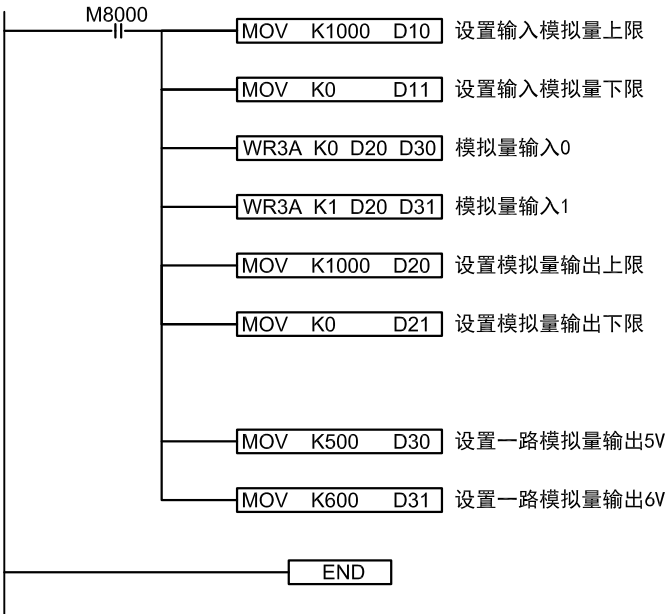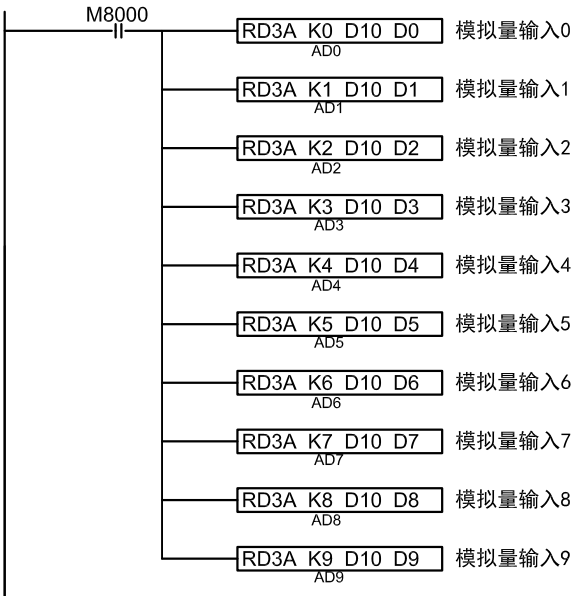    

步进驱动器

脉冲信号

方向信号

产品合格证

 
生产日期

检验结论

合格

检验员

输入属于NPN型，不需要外接电源，直接短接COM和X点即可



03	GND
02	0V
01	24V

09	X7
08	X6
07	X5
06	X4
05	X3
04	X2
03	X1
02	X0
01	COM

09	X17
08	X16
07	X15
06	X14
05	X13
04	X12
03	X11
02	X10
01	COM

09	X27
08	X26
07	X25
06	X24
05	X23
04	X22
03	X21
02	X20
01	COM

模拟量输入


+	-	+	-	+	-	+	-	+	-	+	-	+	-	+	-
AD0	AD1	AD2	AD3	AD4	AD5	AD6	AD7	AD8	AD9						

0-10V模拟量输入

方向 脉冲

Y10	-	+	Y0	-	+
Y11	-	+	Y1	-	+
Y12	-	+	Y2	-	+
Y13	-	+	Y3	-	+
Y14	-	+	Y4	-	+
Y15	-	+	Y5	-	+
Y16	-	+	Y6	-	+
Y17	-	+	Y7	-	+

CAN	485-2/485-1
L	H
B	A
B	A
GND	

 

PLC下载口

- 2 TX
- 3 RX
- 5 GND

JT3U-48MRT-10AD-2DA

PLC运行开关



模拟量输出

DA1	DA0
I-V-G	I-V-G





称重-2
E- E+ S- S+

称重-1
E- E+ S- S+

10	Y27
09	Y26
08	Y25
07	Y24
06	COM1
05	Y23
04	Y22
03	Y21
02	Y20
01	COM0

10	Y37
09	Y36
08	Y35
07	Y34
06	COM3
05	Y33
04	Y32
03	Y31
02	Y30
01	COM2

10	Y47
09	Y46
08	Y45
07	Y44
06	COM5
05	Y43
04	Y42
03	Y41
02	Y40
01	COM4

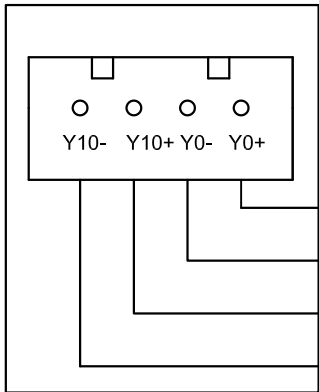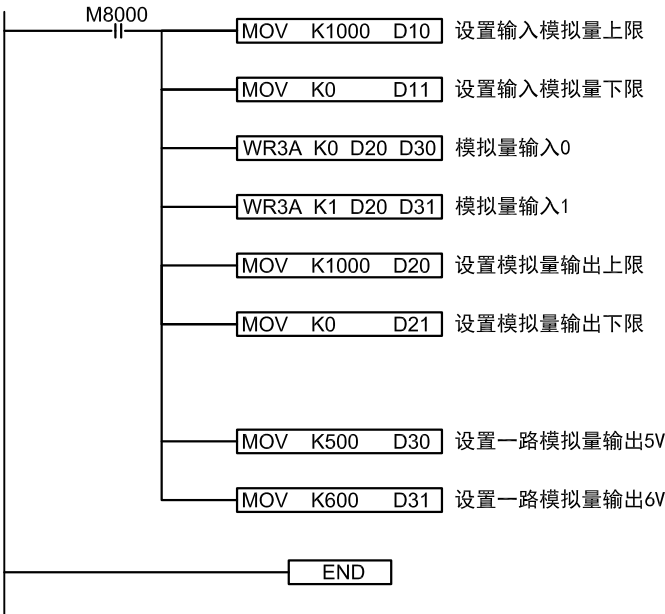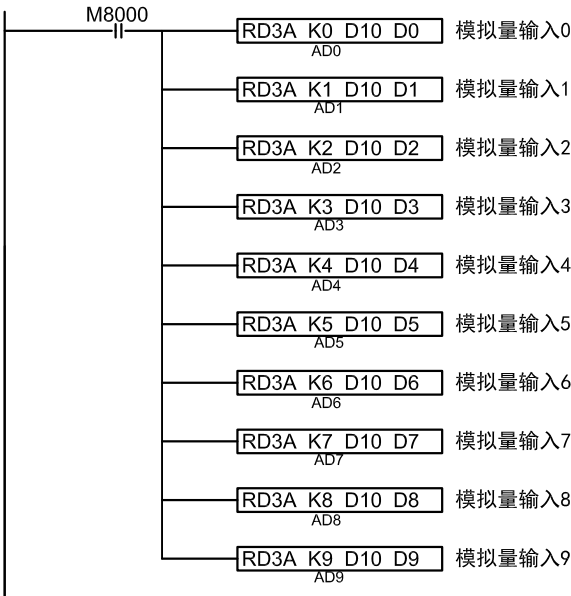    





步进驱动器

脉冲信号

方向信号






产品合格证

生产日期		检验结论	合格	检验员	
------	--	------	----	-----	--

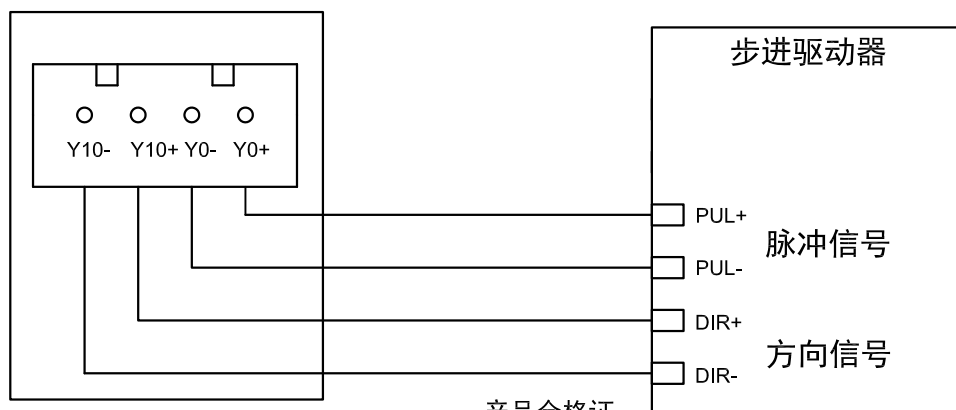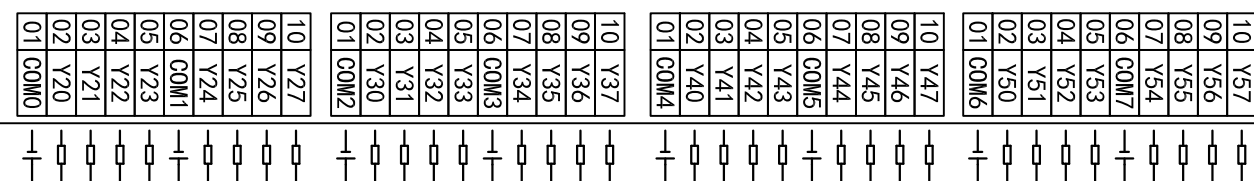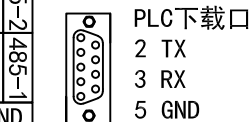    

生产日期		检验结论	合格	检验员	
------	--	------	----	-----	--

     输入属于NPN型，不需要外接电源，直接短接COM和X点即可



01 COM	02 X1	03 X2	04 X3	05 X4	06 X5	07 X6	08 X7	09 X8
01 COM	02 X1	03 X2	04 X3	05 X4	06 X5	07 X6	08 X7	09 X8
01 COM	02 X1	03 X2	04 X3	05 X4	06 X5	07 X6	08 X7	09 X8
01 COM	02 X1	03 X2	04 X3	05 X4	06 X5	07 X6	08 X7	09 X8
01 COM	02 X1	03 X2	04 X3	05 X4	06 X5	07 X6	08 X7	09 X8

模拟量输入

+	-	+	-	+	-	+	-	+	-	+	-	+	-	+	-
AD0	AD1	AD2	AD3	AD4	AD5	AD6	AD7	AD8	AD9						


0-10V模拟量输入

方向 脉冲

Y10	-	+	Y0	-	+
Y11	-	+	Y1	-	+
Y12	-	+	Y2	-	+
Y13	-	+	Y3	-	+
Y14	-	+	Y4	-	+
Y15	-	+	Y5	-	+
Y16	-	+	Y6	-	+
Y17	-	+	Y7	-	+

JT3U-80MRT-10AD-2DA

CAN	485-2/485-1
L	H
B	A
B	A
A	A
GND	

 

PLC下载口

- 2 TX
- 3 RX
- 5 GND

PLC运行开关



Y70





模拟量输出

DA1	DA0
I-V-G	I-V-G

称重-2
E- E+ S- S+

称重-1
E- E+ S- S+

01 COM0	02 Y20	03 Y21	04 Y22	05 Y23	06 COM1	07 Y24	08 Y25	09 Y26	10 Y27
01 COM2	02 Y30	03 Y31	04 Y32	05 Y33	06 COM3	07 Y34	08 Y35	09 Y36	10 Y37
01 COM4	02 Y40	03 Y41	04 Y42	05 Y43	06 COM5	07 Y44	08 Y45	09 Y46	10 Y47
01 COM6	02 Y50	03 Y51	04 Y52	05 Y53	06 COM7	07 Y54	08 Y55	09 Y56	10 Y57
01 COM6	02 Y60	03 Y61	04 Y62	05 Y63	06 COM7	07 Y64	08 Y65	09 Y66	10 Y67

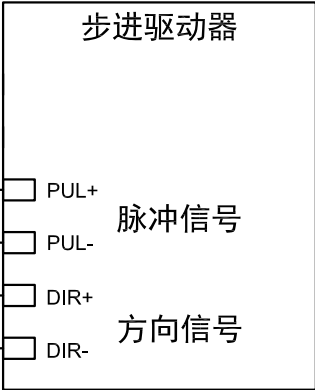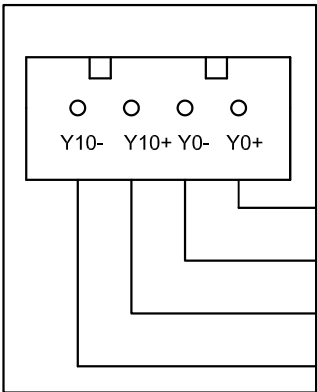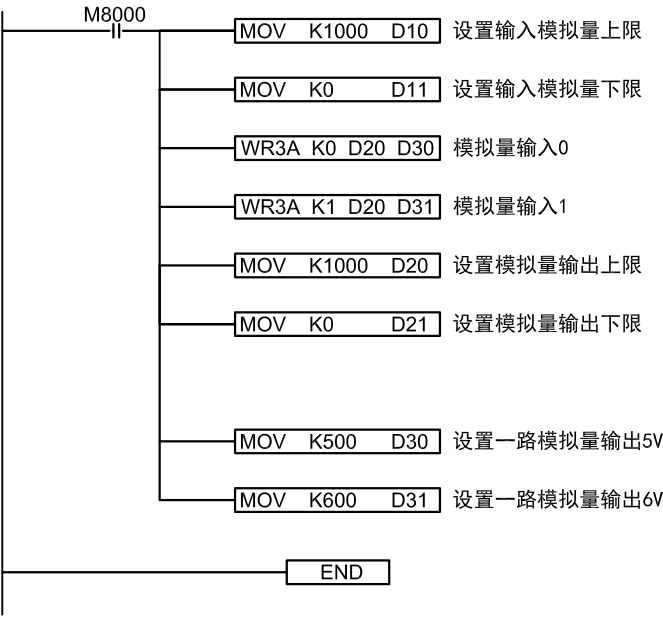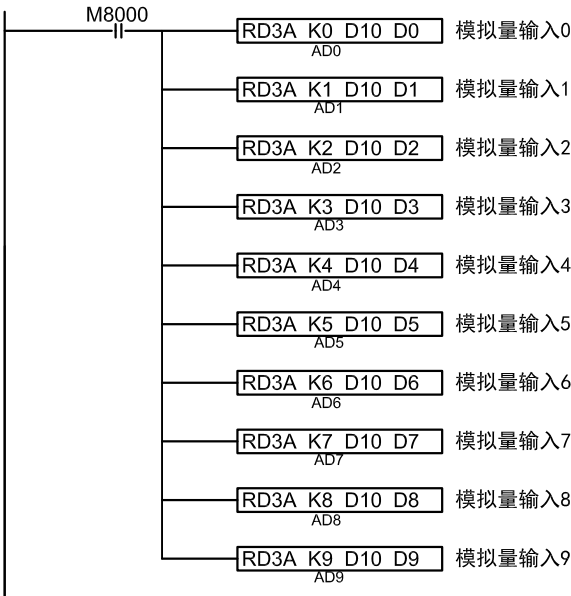    

产品合格证

生产日期		检验结论	合格	检验员	
------	--	------	----	-----	--